

MAINTENANCE CLEANING



PaviFLEX
GYM FLOORING



www.paviflex.es

CLEANING

FLOORING MAINTENANCE

MATERIAL NEEDED



VACUUM



BUCKET



WARM WATER



MICROFIBRE MOP (x3)



STIFF BRUSH (Medium strength bristles)



CLOTH



JONTEC FORWARD or similar (F)
DO NOT USE ON EVA FLOORING



JONTEC TENSOL or similar (T)

OR



SCRUBBER DRYER



WHITE CONTACT PAD* (for post-installation & daily cleaning)



RED CONTACT PAD* (for deep cleaning)

● **ATTENTION:** DO NOT USE ABRASSIVE PRODUCTS.

POST-INSTALLATION

Before first use

● The Scrubber drier can be used for these steps.

- Vacuum
- 50 ml Jontec FORWARD for each liter of solution. (1L. per 15m²)
(DO NOT USE ON EVA FLOORING)
- Apply with microfibre mop. Use different mops for different products (including water).
- Wait 10 min. Don't allow it to dry.
- Rinse well with clean warm water as many times as necessary to ensure elimination
- Leave to dry completely.
- Perform DAILY CLEANING

DAILY CLEANING

For daily cleaning

● The Scrubber drier can be used for these steps.

- Vacuum
- 25 ml Jontec TENSOL for each liter of solution. (1L. per 25m²)
- Apply with microfibre mop. Use different mops for different products (including water).
- Leave to dry completely.

DEEP CLEANING

For intensive cleaning*

● The Scrubber drier can be used for these steps.

● *In case of specific stains such as: dried cement, plaster, etc. Please contact: info@pavilex.es

- Vacuum
- 200 ml Jontec FORWARD for each liter of solution. (1L. per 15m²)
(DO NOT USE ON EVA FLOORING)
- Apply with microfibre mop. Use different mops for different products (including water).
- Wait 5 min. Don't allow it to dry.
- Scrub the solution
- Wait 5 min. Don't allow it to dry.
- Rinse well with clean warm water as many times as necessary to ensure elimination
- Leave to dry completely.

MATERIAL NEEDED

CLEANING

TurFLEX & SlideFLEX MAINTENANCE



VACUUM



BUCKET



WARM WATER



WINDOWS
CLEANER



STIFF BRUSH
(Medium strength bristles)



CLOTH



WAX SLIDE



TAPI SHAMPOO
or similar
(S)

OR




TURF CLEANER

● **ATTENTION:** DO **NOT USE** ABRASSIVE PRODUCTS.

TurFLEX


Deep cleaning

● The Turf cleaner can be used for these steps.

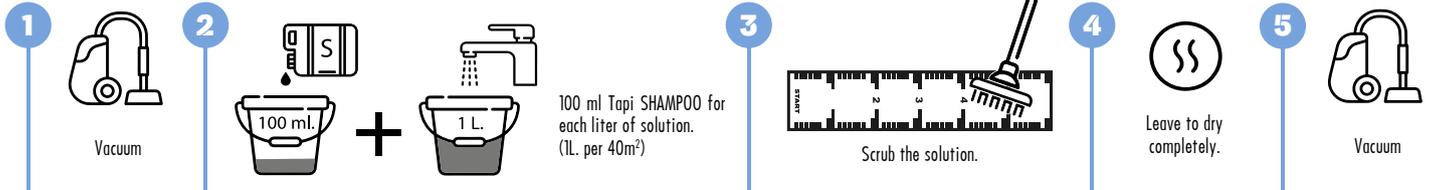

SlideFLEX

Daily cleaning

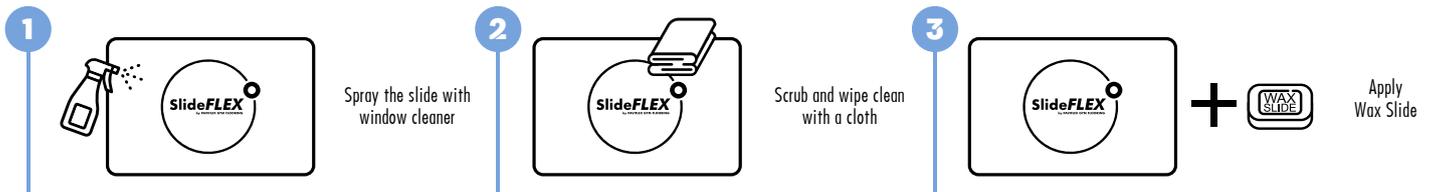

DISCOVER
WHAT
MAKE US
DIFFERENT

PAVIFLEX GUARANTEE

PaviFLEX
GYM FLOORING

The validity of the guarantee would exclusively be applicable against manufacturing defects and only under the enclosed guarantee terms with a duration of 2 years from the selling date and always whenever the guideline for handling, installation and use have been respected.

It is mandatory to notify us any manufacturing defect by writing within 30 days after receipt of the material. Otherwise, the guarantee will become null and void.



HANDLING AND RECEIPT OF THE MERCHANDISE:

The merchandise must not be exposed to the sun light, direct rain, or temperatures over 40°C. Before the installation, the manufacturer must be advised of any noticeable defects on the sheet surface. The duty of the manufacturer is replacing the damaged sheets. Due to the manufacturing process, the tiles might show a slight variation in color or sheen on their surface which should not be in any case considered as a defect.

HOW TO INSTALL:

Installation grounds:

The surface / ground where the paving is going to be installed must be completely flat and smooth to avoid any intervals when assembling the pieces together.

Temperature:

The paving cannot be exposed to temperatures over 40°C.

Sun exposure:

The areas exposed to a higher level of sun exposure can undergo changes such as loss of sheen, etc...In case that the installation is located besides a window or any other area where the sunlight exposure would affect the paving, it must somehow be protected to avoid the tiles getting into temperatures higher than 40 °C.

All our rubber products (except TurFLEX) are indoors as for an outdoor use they could undergo changes in color or malformation.

These products are subject to a minimum expansion and contraction due to temperature conditions.

As a general specification, when installing the flooring a dilation free space have to be left between the tiles and the walls or columns. The dilation margin will depend on the sqm dimension of the setting up area (Approx. 2mm per lineal meter). If such free margin is not taken into consideration, tiles could put up due to expansion and contraction.

Assembling steps:

The easiest way to make sure that the installation is carried out in the correct way, is starting the installation from the center going outwards filling the area in a clockwise radial order. To adjust the sheets in the end areas or those located against a wall or pillar, a cutting line must be marked, making a small incision with a knife going over it by several times.

WARNING: It is strictly NOT recommended attaching any structure to the flooring surface that requires screwing.

TERMS OF USE:

PaviFLEX Gym Flooring is a product with exclusive application to sport activities, and consequently stepping on should be made with proper sport shoes, with rubber soles except for PaviFLEX Tatami (designed for Martial Arts and Stretching) as well as PaviFLEX Junior (designed for children's playgrounds) which are to be used barefoot.

PaviFLEX Tatami & PaviFLEX Junior are not resistant to any structures or machinery. Special care should be taken by not unloading heavy merchandise with sharp ends that could eventually mark and break the surface, not recovering its original appearance.

The guarantee would become null and voided whenever any of the terms previously exposed have not been complied such as using the wrong footwear, using abrasive cleaning products, and/or giving the flooring a use other than the one for which it has been designed for.